

Please Read Carefully Before Use!

Abridged Operating Instructions for Parking Platform 501

Safety Regulations


- The installation is exclusively for the use of cars!
- Working on the platforms is prohibited!
- When In-parking and Out-parking, always switch On the garage and vehicle lights !
- Do not enter the installation if the yellow warning light is flashing !
- Never In-park or Out-park the same time as someone else. Always take it in turns !
- Avoid collision:
 - Between the car and the facility when parking and exiting!
 - between the car and the installation/installed parts/building, when the platform is moving!
- Always move in forward direction when In-parking!
- Drive onto the platform at walking speed!
- Do not drive over the platform !
- Do not park on the empty parking place !
- When walking in the installation, watch for protruding edges and unevenness to avoid tripping!
- Beware: danger of slipping on the platform in wet, icy and snowy conditions!
- Please make sure there are no passengers on the platform when in-parking or out-parking!
- It is prohibited to drive passengers on the platform!
- Watch out for children and pets, keep them away from the parking system!

Before performing authorised work on parking systems by trained personnel, please note !


- Switch OFF lockable main switch and secure against switching on !

Operating Instructions

Overview of the installation

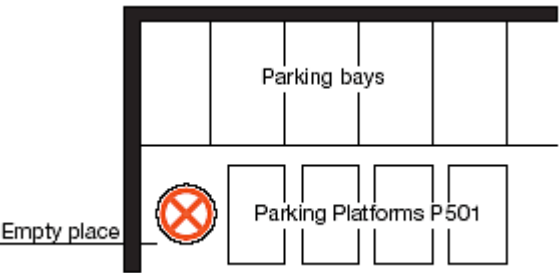

Operating panel

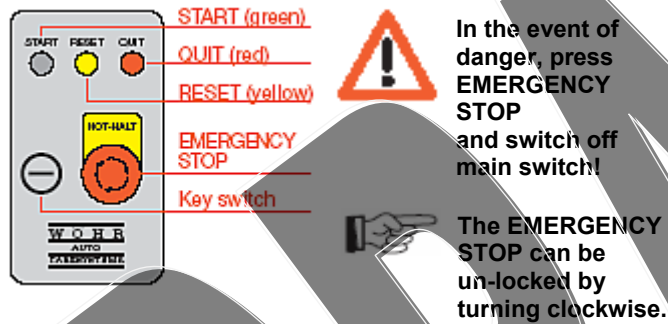

Ordering parking platforms

- Make sure there are no persons or objects in the installation area !
- Green START button lights up
- Coded key is only to be inserted Do not turn !
- Green START button flashes
- Press green START button
- Platforms move to position
- Remove the key

Do not park car in empty place !

Car Data

Max. Length	5000 mm
Max. Width—without outside mirror (with parking place width of 1970 mm)	xxxx mm
Maximum weight	2000 Kg
Maximum wheel load	500 Kg


In-parking on parking bays

Platforms must be requested for every Parking operation. Parking is permitted only within the boundaries of the parking place.

In-parking on platforms

Before parking, pay attention to the maximum permissible car weight and car dimensions, in particular when parking for the first time and after the car has undergone modifications (wheel or tyre change, custom parts etc.) Remove any residues of snow and ice lying in front of the garage and obstructing the vehicle. Do not drive onto a platform with snow chains or spikes. Unload luggage; close boot or rear hatch door. Always position car on the platform in such a way that no parts of the car protrude beyond the platform. Place positioning aid as required according to vehicle dimensions.

Positioning Aid
Position the wheel stop so that the car is in driving direction, and centrally placed on the platform.

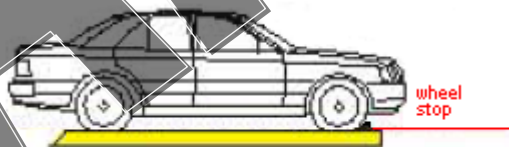

Do not drive over wheel stop. Move into first gear (with automatic cars, in position P). Put on the hand brake, turn off engine, lock doors.

Out-parking



Platforms must be requested for every parking operation. Watch out for people and objects when driving into the aisle.

Emergency operation

Watch for people and objects when driving into the aisle.

Make sure there are no persons or objects in The installation area !
Move the parking platforms only one at a time !

- Press the red button at the platform.
- Keep the red button depressed, move the platform step by step carefully and slowly up to a maximum of 1 metre.
- The platform brake is applied by releasing the red button.

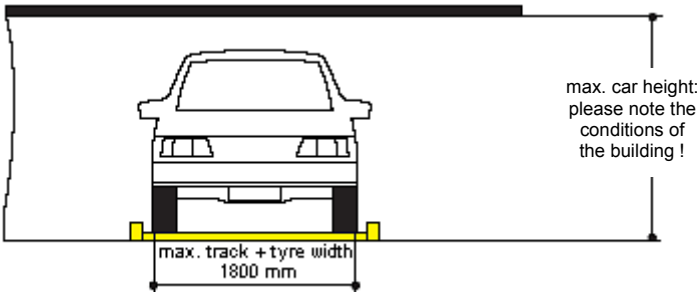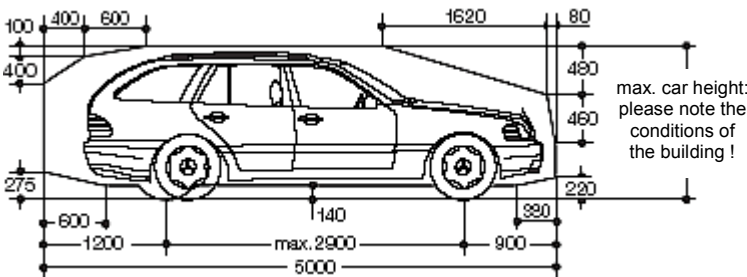

Cars with a low slung suspension and cars with front spoilers may only be parked at the risk of the driver.



Building 8, 163-179 Forster Road
Mount Waverley, Victoria, 3149 Australia
Phone: 1300 964 728